
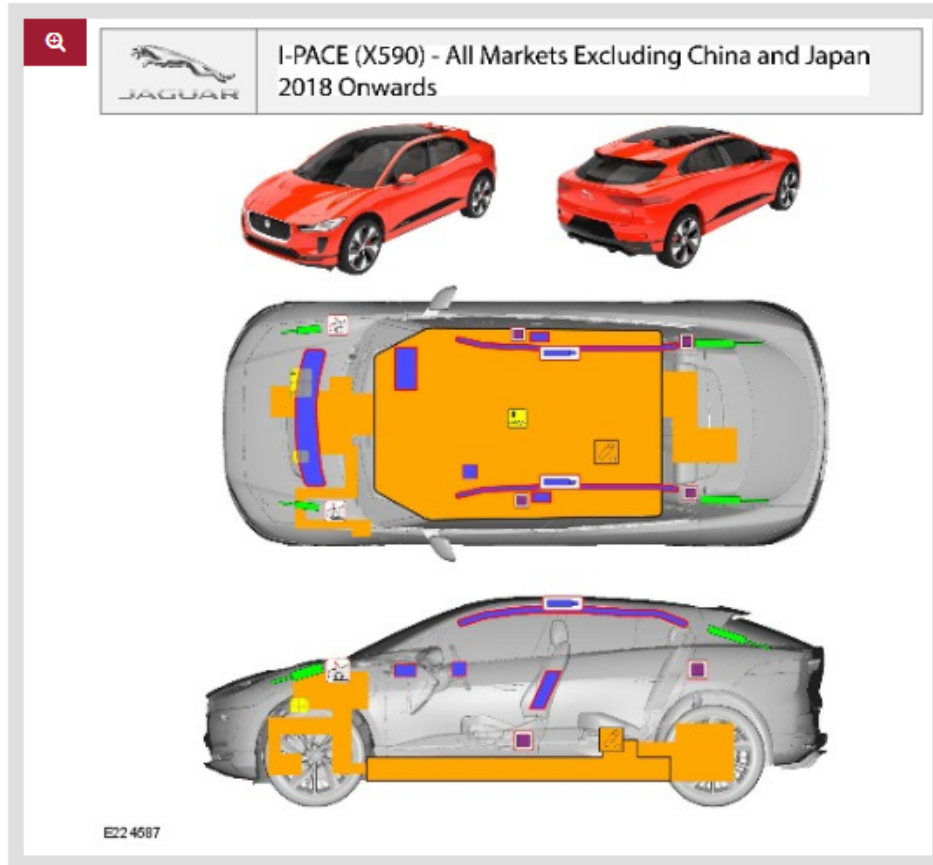
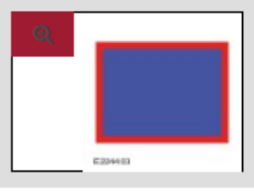
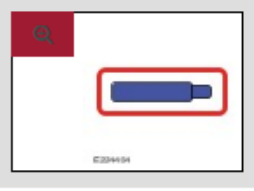



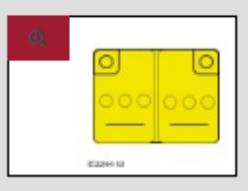


2019.0 I-PACE (X590), 100-00
GENERAL INFORMATION

DESCRIPTION AND OPERATION

RESCUE SHEET

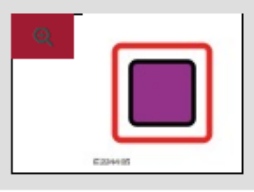

ITEM	DESCRIPTION
 <p>E22443</p>	Airbag
 <p>E22444</p>	Airbag inflator/ stored gas inflator
 <p>E22445</p>	Seatbelt pretensioner
 <p>E22447</p>	Pedestrian protection active system

	Gas strut/Preloaded spring
	SRS control unit
	Battery, low-voltage
	High-voltage battery pack
	High-voltage power cable/ component
	High-voltage disconnect

AVOIDANCE OF ROLL AWAY OF THE CRASHED VEHICLE


The vehicle may roll if the transmission does not lock or the park brake is inoperable. The road wheels should be chocked to prevent unexpected movement.

Vehicle lifting and jacking points can be found behind the sill trims as shown in the illustration.


⚠ WARNING:

Make sure that no contact is made between the lifting equipment and the high voltage battery or any other high voltage components.

The jack or lift support must be positioned centrally on the locations shown to provide a safe vehicle weight distribution and avoid vehicle damage.

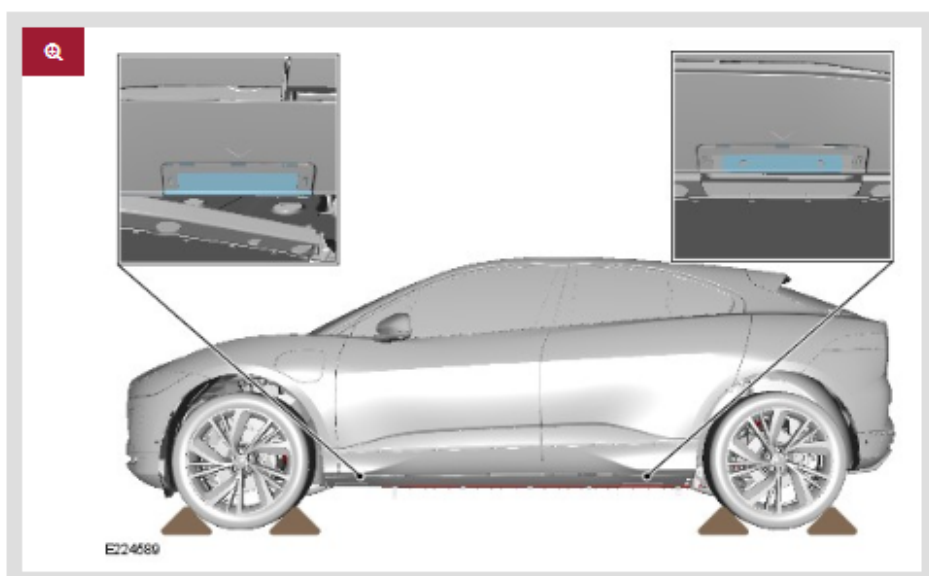

DISCONNECTING THE STARTUP BATTERY

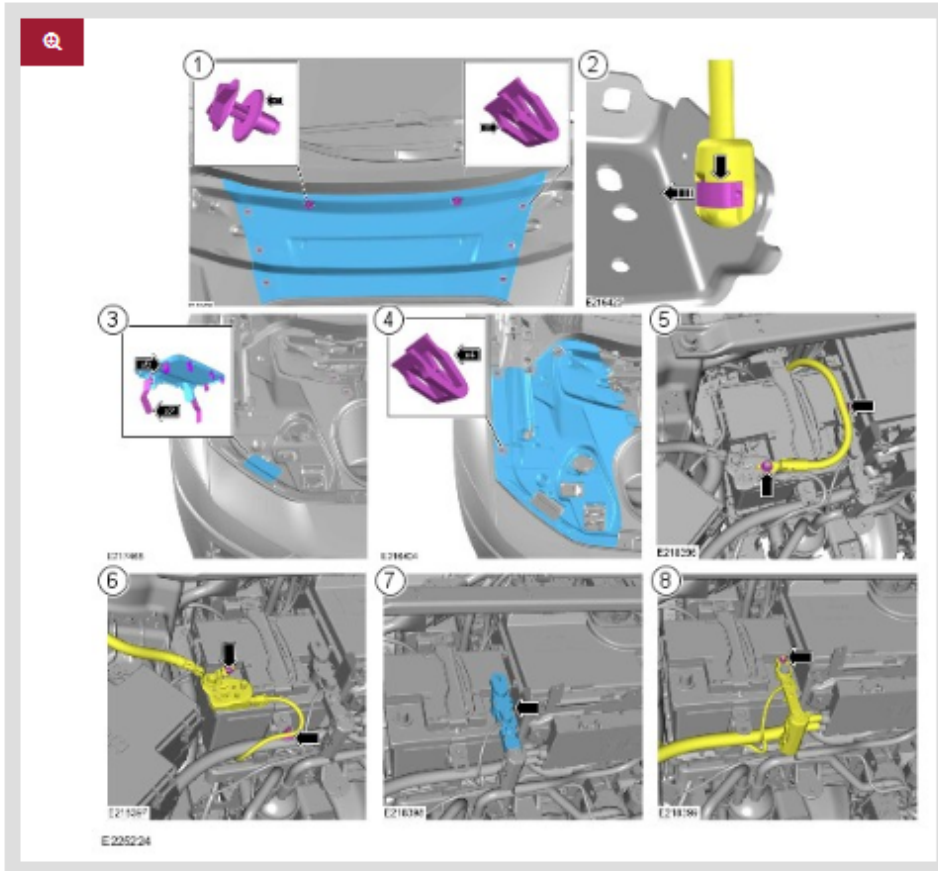

ITEM	DESCRIPTION
1	Release 6 clips and 2 screws and remove the front compartment center trim panel
2	<div style="background-color: #f4a460; padding: 5px; border: 1px solid #f4a460;"> <p>WARNING:</p> <p>Make sure that the hood is sufficiently supported before the gas strut is disconnected.</p> </div> <p>Release the strut from the body</p>
3	Release the 5 clips and remove the trim panel
4	Release the 4 clips and remove the trim panel
5	Disconnect the Direct Current to Direct Current converter (DC/DC) ground cable
6	Disconnect the startup battery ground cable
7	Remove the startup battery positive terminal cover
8	Disconnect the startup battery positive terminal